

IMPORTANT: Read System Manual and Quick Reference Guide before using System. Not all screens are shown.

Facilities with a Certificate of Waiver may perform this procedure and must follow the manufacturer's instructions for performing the procedure. 42 USC263a(c).




039






## Unpacking the Acucy System

A Calibration Device (CAL-Device) (Catalog #1031) is required but supplied separately to allow the Operator to perform a functional calibration on the Reader. Remove the Acucy™ System from its packaging. Visually inspect the contents to make sure it is not damaged. Store packaging in a safe location.

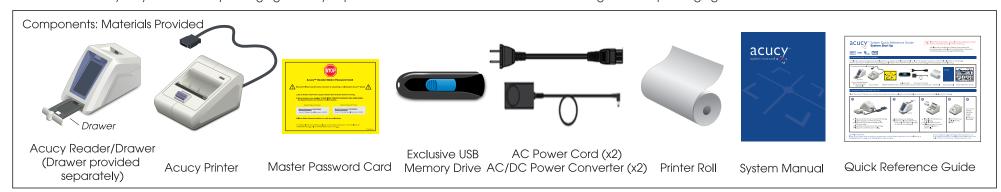

#### Connect to Power and Turn On

Place the Acucy™ Reader on a counter top in reach of a power outlet. The unit is portable and can be moved to a suitable location for testing.

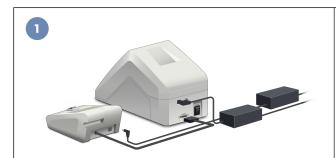

- 1- Plug one AC/DC power converter into Reader. Plug the second converter into Printer.
- 2 Plug the AC/DC power converters into the AC power cords.
- 3 Plug printer cord into port on the Reader.
- 4 Plug power cords into power outlet.



- 1- Insert drawer into Reader.
- 2 Insert the included USB Memory Drive firmly into USB port located on the top of the Reader.



- 1- Slide Blue Printer Knob up and release.
- 2 Firmly lift Printer Cover.
- 3 Pull paper back to create a paper tail. Drop in printer roll.



Close Printer Cover until it clicks into place.



Turn on the Reader using the power switch located on the back.



1031

# Y™ System Quick Reference GuideCalibration Procedure

IMF pro

IMPORTANT: Read and follow the complete Calibration procedure before performing the calibration. Refer to the Instructions for Use (IFU) and System Manual for more complete information. Not all screens are shown.


Facilities with a Certificate of Waiver may perform this procedure and must follow the manufacturer's instructions for performing the procedure. 42 USC263a(c).

#### Perform Calibration Procedure

 
NOTE: Acucy Reader calibration is on a 30-day cycle, The 30-day-cycle is displayed by the Reader each day on the MAIN MENU screen.

### Calibration will be performed

- When installing a new Acucy Reader
- As directed during troubleshooting
- Every 30-days
- After Acucy Reader time/date settings are changed

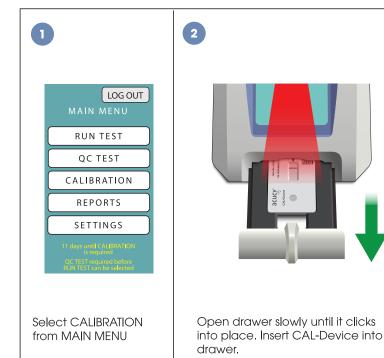







#### TECHNICAL SUPPORT

If Calibration does not pass, contact Sekisui Diagnostics Technical Support for assistance at 800-332-1042 (U.S. Only), and 781-652-7800 (outside the U.S.)